

Front-Load Washer




1. Load clothes and close the door securely. Door will lock during cycle.



2. Add detergent, bleach, and fabric softener in the dispenser compartment.

Avoid over-soaping. **ONLY 1/4 CUP OF DETERGENT** is required in front-load washers. H.E. (high efficiency) detergent is recommended.

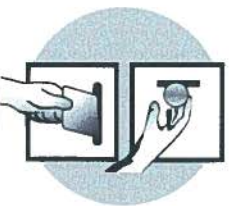

3. Insert coins, or if card operated, insert card into the card reader. Leave card in reader until instructed to remove.



4. To start, press desired fabric setting button. The door will lock one minute after pressing the fabric-setting button. It will remain locked until the cycle is finished.

For best results: Wash full loads, avoid over-soaping, and remove clothes promptly at the end of the wash cycle.

Personal Safety Rules:

- Only wash items with a machine-washable rating. Never wash items containing flammable tumes.
- Never allow children to operate or play in, with, or around the equipment or the laundry room.

Not responsible for clothing damage due to misuse or overloading.

Refer to garment tags for special washing & drying instructions.

Use of this LAUNDRY ROOM is for RESIDENTS ONLY. Please help keep your laundry room clean. This laundry room is leased by Web Service Company, LLC.

LAUNDRY ROOM INSTRUCTIONS



1. Clean the lint filter compartment below the door. A clean lint filter means a more efficient drying cycle.

Dryer



2. Place clothes loosely in the dryer. Close the loading door securely.

3. Insert coins, or if card operated, insert card into the card reader. Leave card in reader until you are instructed to remove it.



4. To start the dryer, select and press a fabric setting. If you are using a stack dryer, make sure you select the fabric setting for the correct dryer -- upper or lower.



5. The dryer will stop whenever the door is opened during the drying cycle. To restart the dryer, close the door and press the fabric setting again.

Avoid Wrinkling: Remove delicate and permanent press articles promptly after the drying cycle.

FOR SERVICE CALL: 800.342.5932

Please identify the laundry room number specified below in addition to the machine number located on the equipment.

Laundry Room No. _____